

INSTALLATION / SAFETY INSTRUCTIONS

Step 1

Locate vehicle battery on the driver side under the hood and disconnect the negative battery terminal (A).

Step 2

Open the vehicle tailgate. Remove all trunk floor coverings (B,C).

Step 3

Remove the scuff panel by pulling out on the bottom and then up (D).

Step 4

Starting on the driver side, remove the Phillips screw from the side trim panel (E).

Step 5

Pull back on the side trim panel taking care not to damage the alignment tabs located on the back side (F).

Step 6

Locate the vehicle taillight wiring harness connectors. The connectors will be similar to those on the custom wiring harness (G). Separate the connectors from the taillight housing taking care not to damage the locking tabs (H).

Step 7

Insert the custom wiring harness end with yellow wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place (I).

 **WARNING:** Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

Step 8

Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle frame or drill a 3/32" pilot hole for the provided screw. The area should be free of rust, dirt and paint. Secure the white ground wire using the ring terminal and provided screw.

Step 9

Route the custom wiring harness end with the green wire to the passenger side behind the removed scuff panels. Repeat steps 4-7 on the passenger side using the harness end with the green wire.

Step 10

Locate a flat spot inside the vehicle, near the taillight. Adhere the black converter box using the provided double-sided tape (J).

Step 11

When in use, route the 4-flat to the center of the vehicle and out of the trunk. When not in use, roll up and store in a convenient, out of the way location inside the trunk. Secure any loose wires with the provided cable ties.

Step 12

Reinstall all items removed during install and reconnect negative battery terminal. Install the provided 4-flat dust cover to prevent corrosion.

