

Components and Hardware:

1.




Components and Hardware:

- 1. Load Stops.....(4)


RealTruck Load Stops

1. Ensure the twist knob on the Load Stops are loosened to allow the T-bolt to slide into the T-slot.

Slide the Load Stops into the T-slot in desired location.

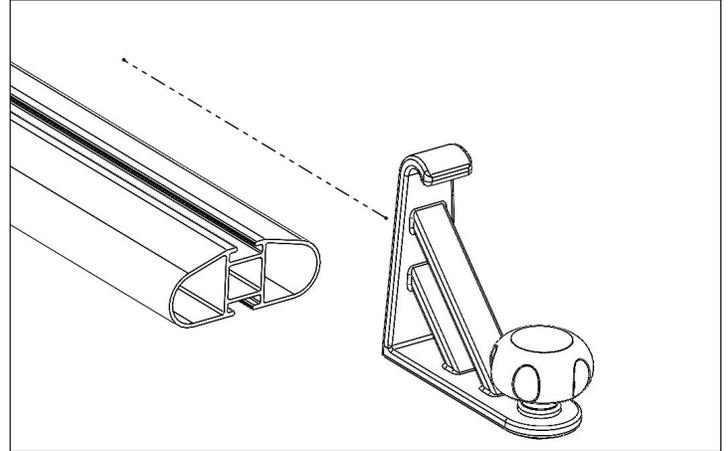

2. Tighten the twist knob until the Load Stops do not move and are locked in place.

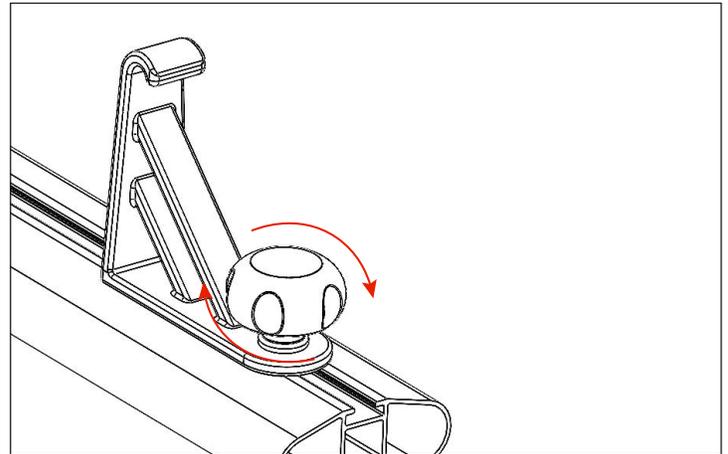

Safety Guidelines

- If payload is below the tops of the Load Stops, secure straps directly to the vehicle's crossbars.
- If payload extends above the tops of the Load Stops, straps can be secured to the Load Stops or to vehicle's crossbars.
- All extended loads must be tied down to the front and rear bumpers or tow hooks on the vehicle.

Warranty Information

See warranty information on RealTruck.com.