

## AR BULL BAR FOR MITSUBISHI TRITON 19-22









### Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

### Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.
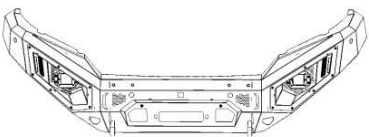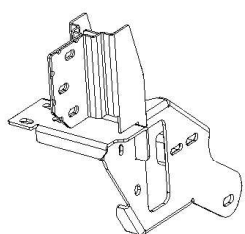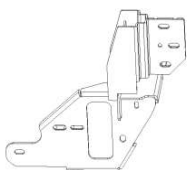
### Parts list

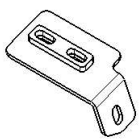NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Bull bar main body	②	1	 Winch frame (L)
③	1	 Winch frame (R)	④	1	 Winch frame connector
⑤	1	 L skid plate	⑥	1	 R skid plate
⑦	1	 Mid skid plate	⑧	1	 L. Bracket 1




# INSTALLATION INSTRUCTIONS

②③	1	A light blue L-shaped metal bracket with a circular hole at the end of the longer arm.	②④	1	A light blue L-shaped metal bracket, mirror image of the left one, with a circular hole at the end of the longer arm.
		Skid plate connecting bracket (L)			Skid plate connecting bracket (R)
②⑤	1	A long, thin, straight metal rod.	②⑥	1	A blue, rectangular radiator with a complex internal structure and a mounting bracket at the bottom.
		Pinch Weld			Radiator (TRITON)
Hardware List					
②⑦	1	Socket head wrench S=4	②⑧	4	Hex Nut M10
②⑨	16	Hex Nut M12	③①	1	Hex Nut M8
③①	2	Hex bolt M10_30	③②	4	Hex bolt M10_40
③③	2	Hex bolt M12_120	③④	6	Hex bolt M12_35
③⑤	2	Hex bolt M12_55	③⑥	2	Hex bolt M8_16
③⑦	1	Hex bolt M8_25	③⑧	4	Hex bolt M8_30
③⑨	4	Hex bolt (Fine Thread) M10x1.25_35	④①	2	Hex bolt (Fine Thread) M10x1.25_50
④①	8	Hex Flange Nut M6	④②	8	Hex Flange Nut M8
④③	4	Dome head bolt M8_25	④④	23	Assembly Bolt M6_20/A2-70/ φ 18mm
④⑤	2	Self-tapping screws ST6_20	④⑥	16	Large Washer D10(10x30x2.5mm)
④⑦	12	Large Washer D8(8x24x2mm)	④⑧	12	Spring Washer D10
④⑨	16	Spring Washer D12	⑤①	11	Spring Washer D8
⑤①	2	Dome head bolt M6_16	⑤②	26	Flat Washer D12_32_3
⑤③	2	Large Washer D6(6x18x1.6mm)			


## INSTALLATION INSTRUCTIONS

### Installation Steps


Assemble the winch frame:

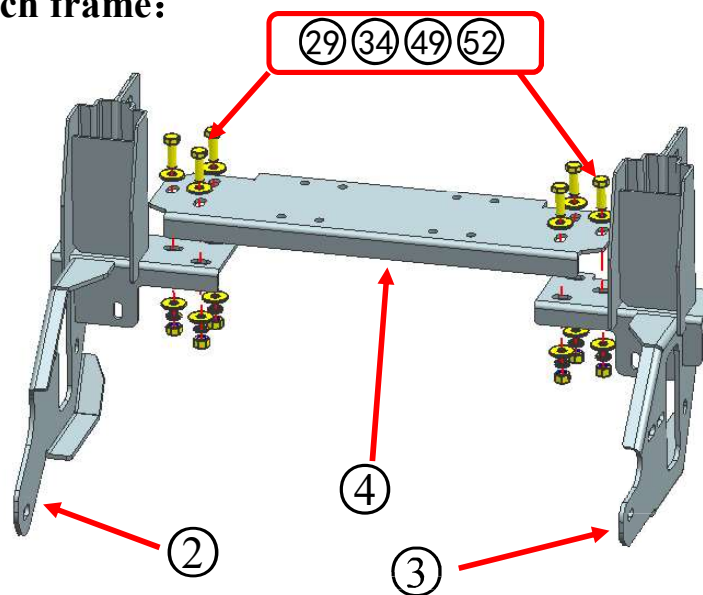


Installation Fig.

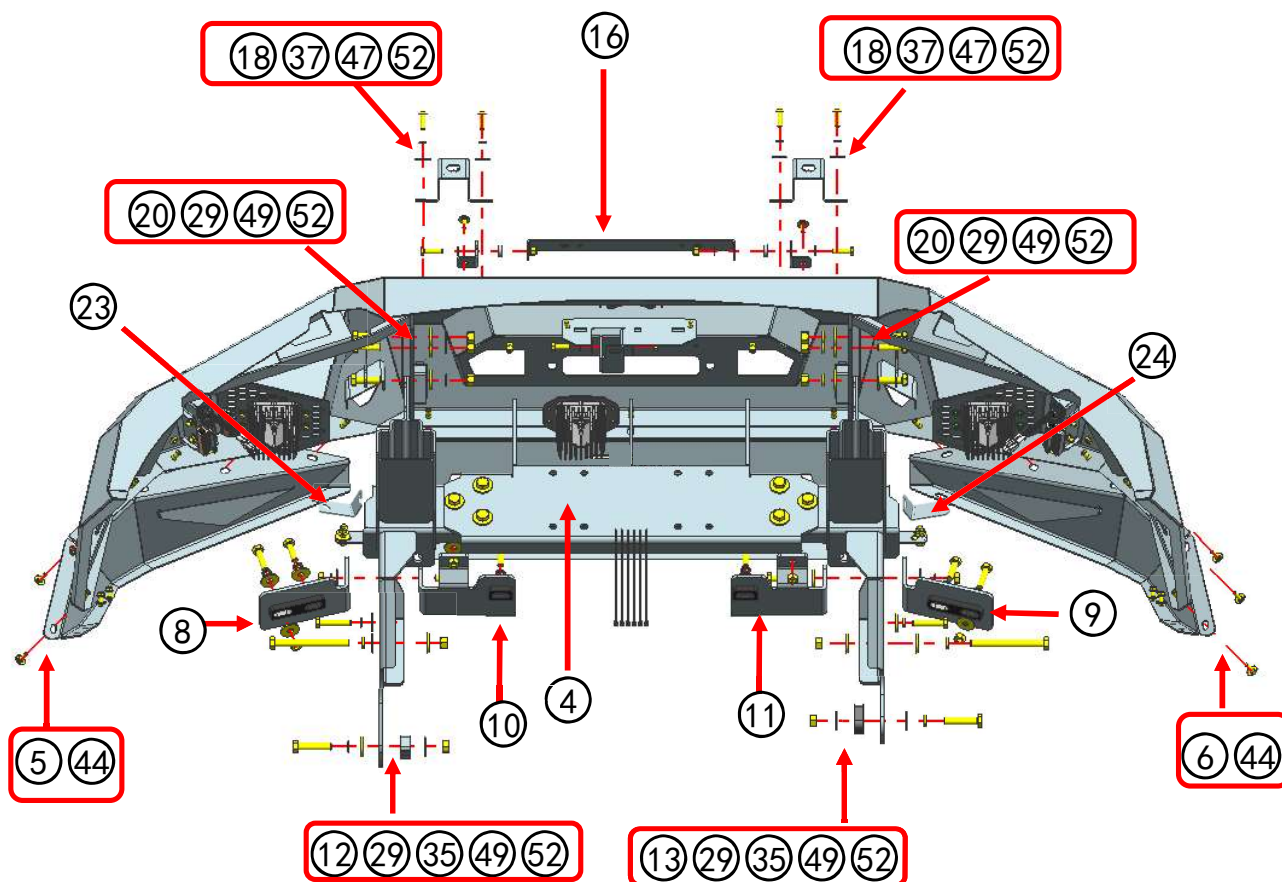

## INSTALLATION INSTRUCTIONS

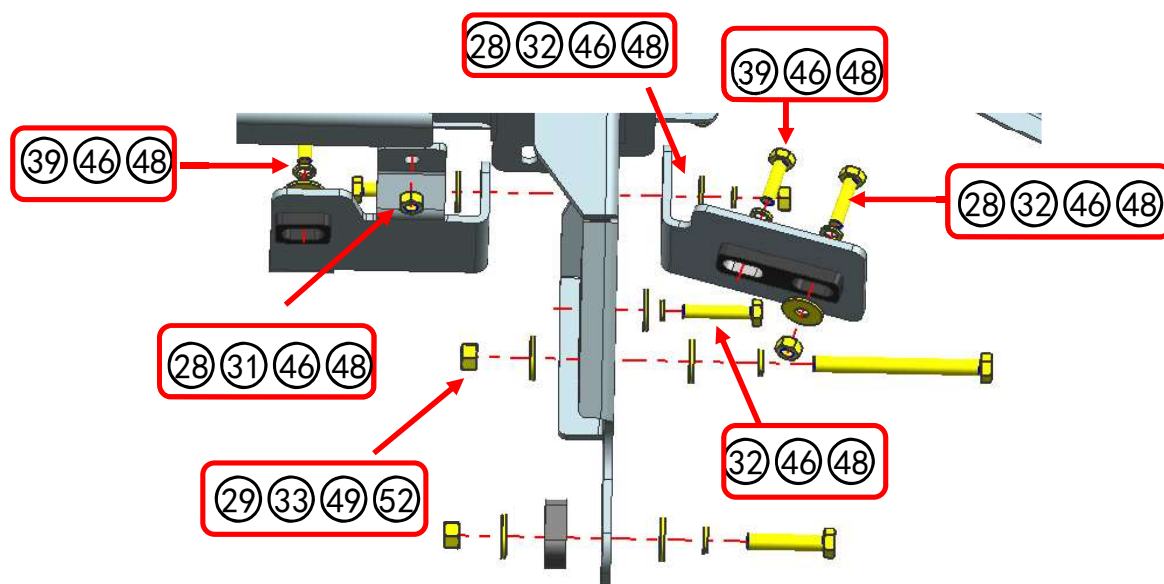


Step 1 Remove factory front grille showed as below.

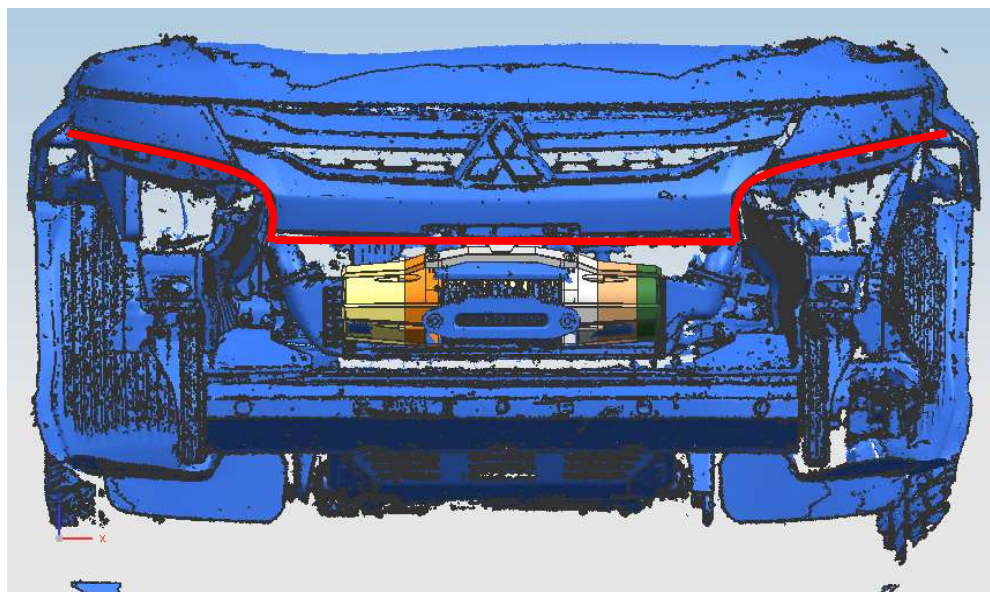




## INSTALLATION INSTRUCTIONS


Step 2 Install brackets for grille with hardware ⑰ ⑱ ⑳ ㉓ ㉔ ㉕ ㉖ showed as below.

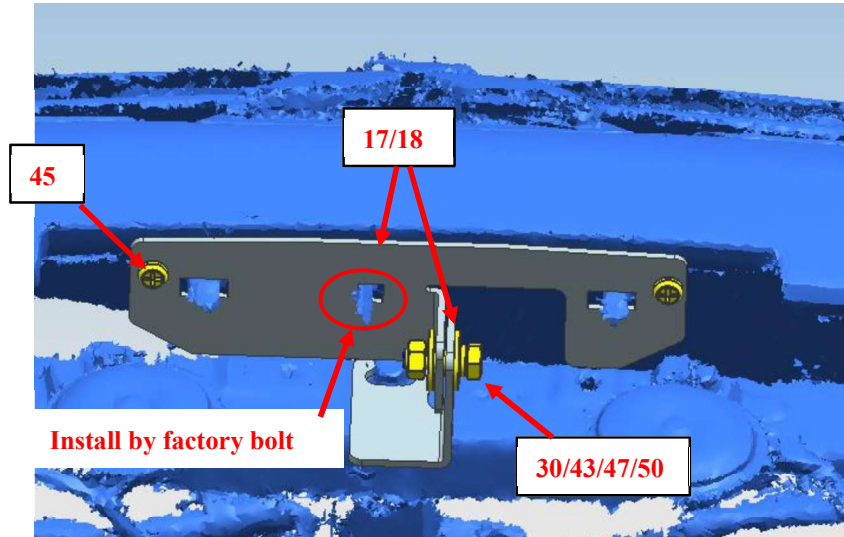

Step 3 Install the winch frame bracket and install it in the corresponding position of the body by hardware ② ③ ⑧ ⑨ ⑩ ⑪ as shown below, please repeat above steps to right hand side

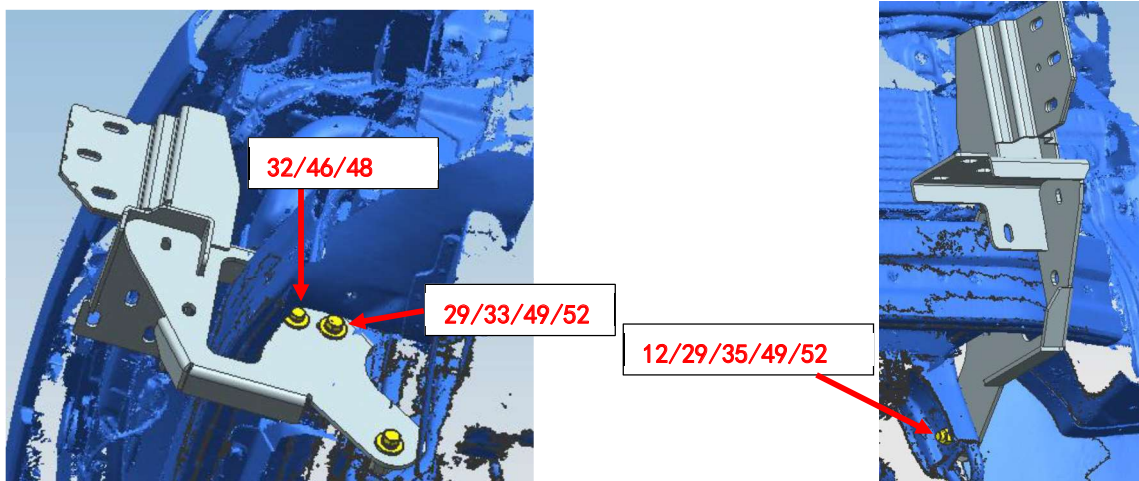


Step 4.1 Assemble support brackets on winch frame, please repeat above steps to right hand side.

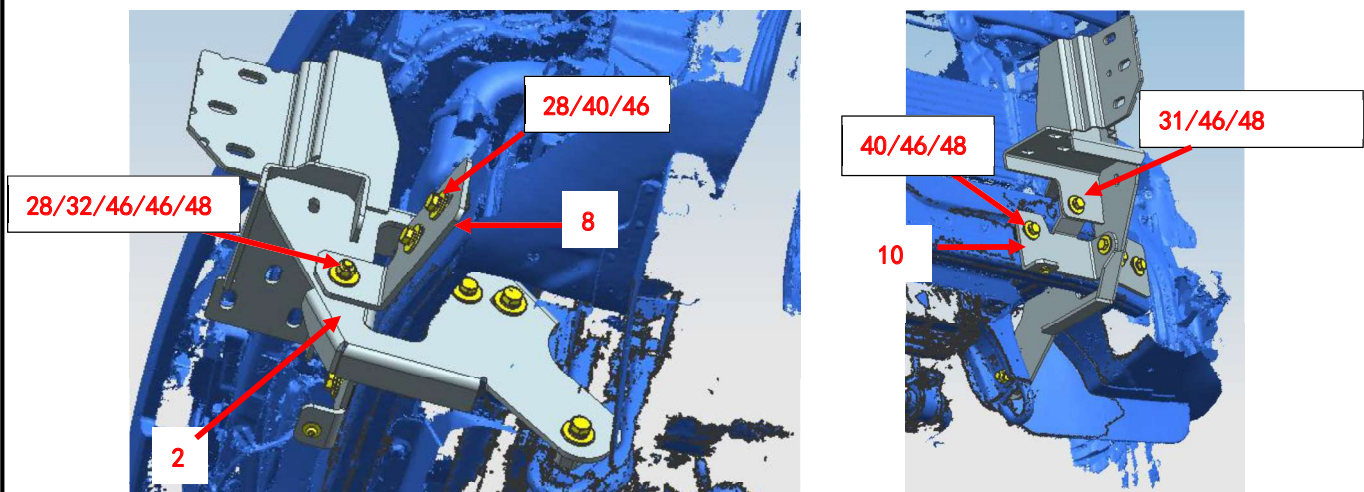


## INSTALLATION INSTRUCTIONS


Step 4.2 Install the Winch frame connector as shown below.

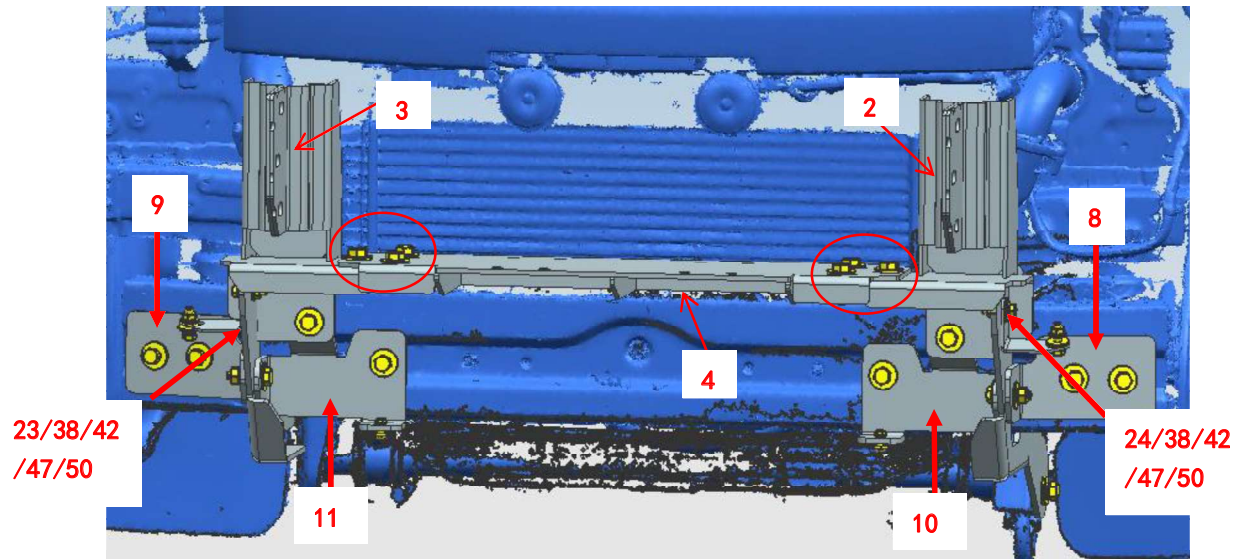

Step 5 Install camera holder on the bull bar body by hardware as shown below.

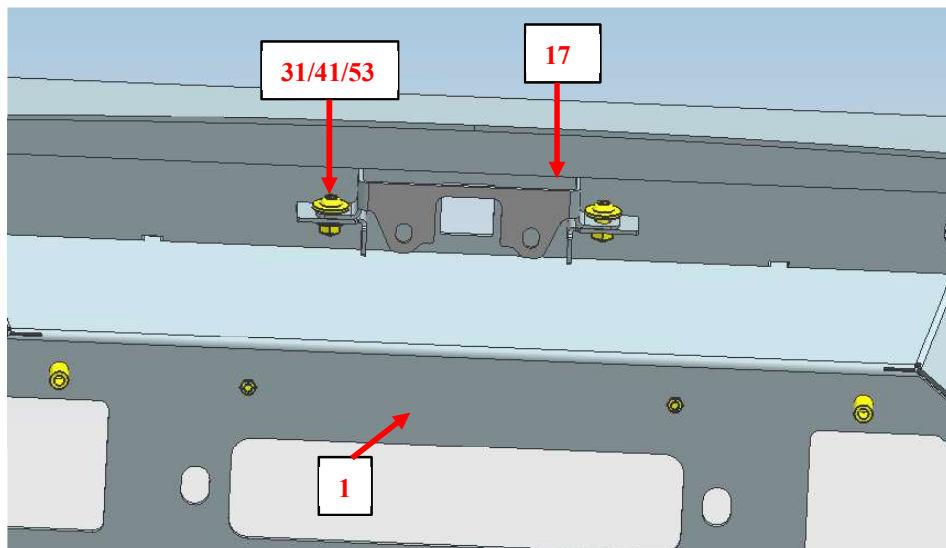


Step 6 Assemble bumper assembly and winch bracket by hardware as shown below.

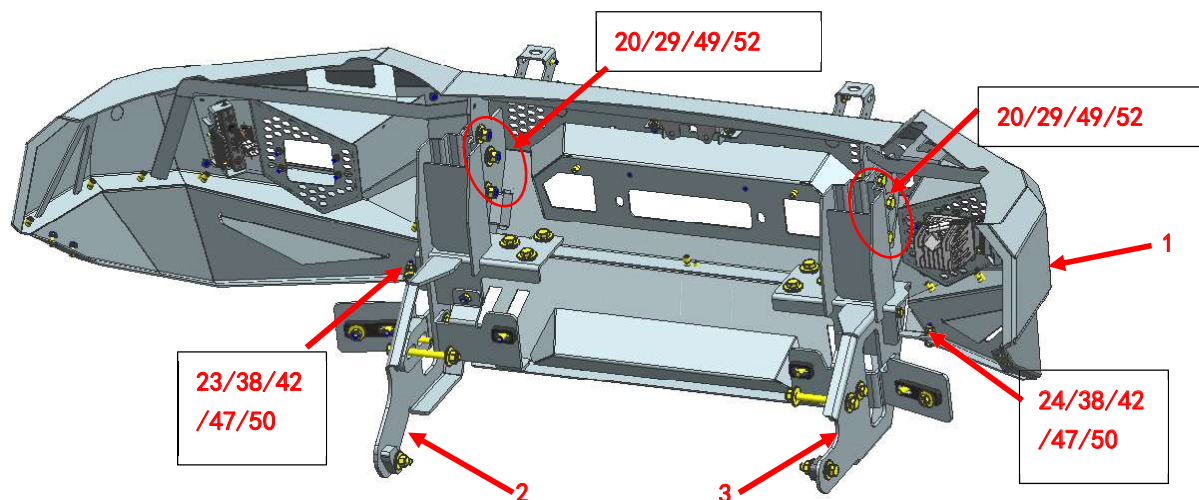


## INSTALLATION INSTRUCTIONS

Step 7 Assemble the skid plate ⑤⑥⑦ to the bumper by ④①④④④⑨.

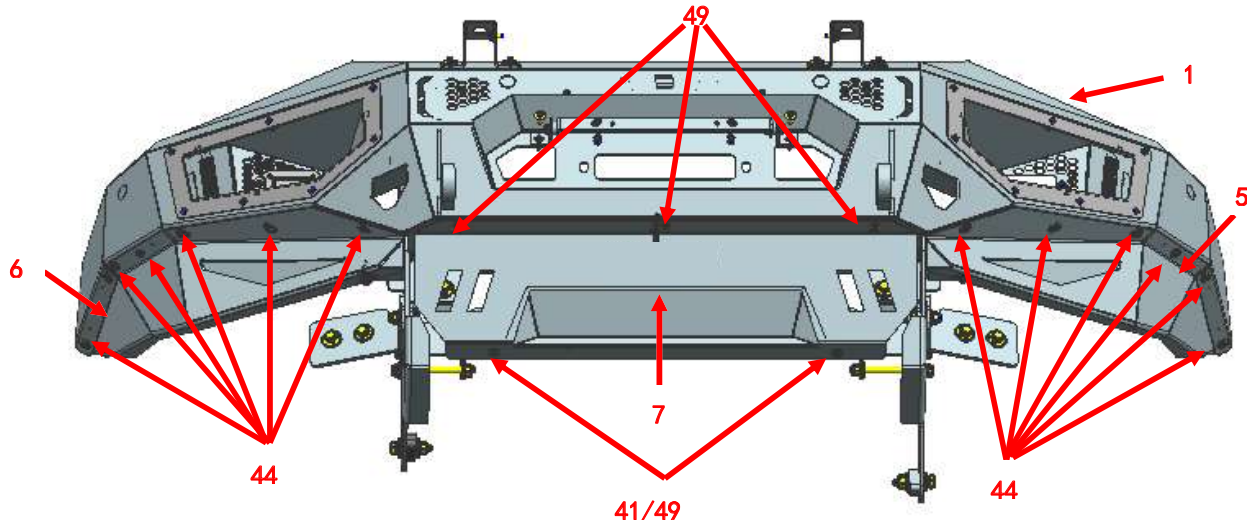

Step 8 Assemble the license bracket ①⑥①⑧ on the bumper by ①⑥①⑧③⑦④④④⑦⑤②.

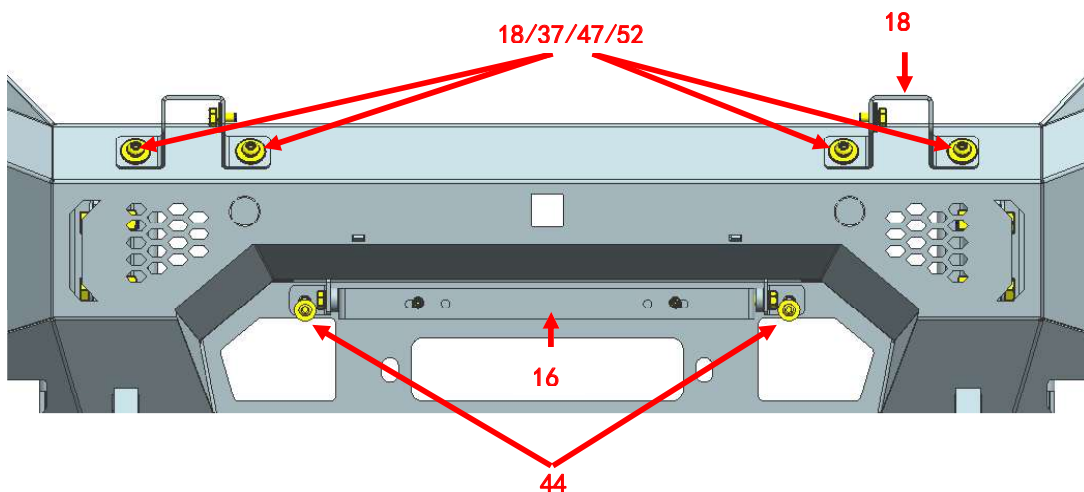

Step 9 Test and make sure that the guard is steadily fixed, fully tighten all hardware.

Step 10 Installation is finished, pick up all tools.

### NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.